


#### **CAUTION**

PLEASE REFER TO YOUR EQUIPMENT MANUFACTURER'S OPERATORS MANUAL FOR PERTINENT SAFETY PRECAUTIONS



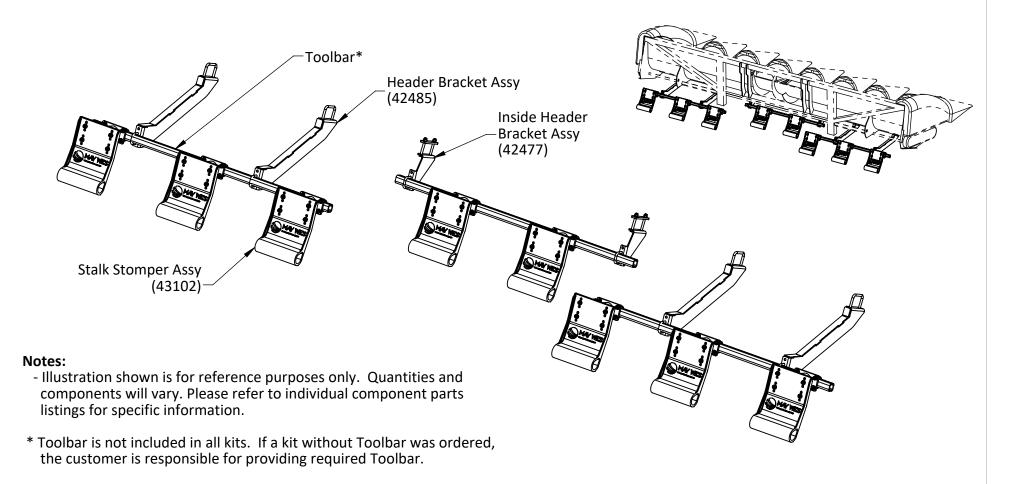

120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

#### 6 Row Head






6 Row Head 2 Row Layout







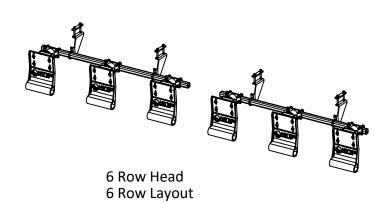



120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)


8 Row Head







8 Row Head 2 Row Layout







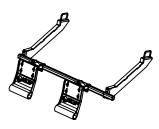

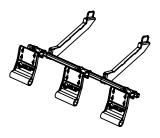

8 Row Head 6 Row Layout

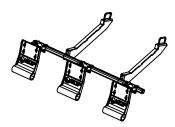


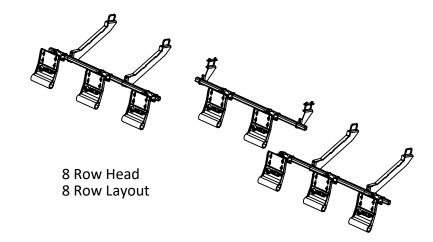



120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

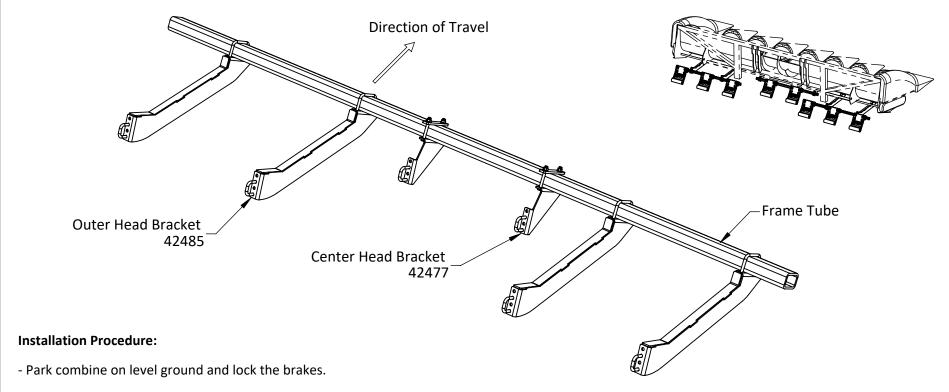


- Raise the head and lock in the upright position.
- Mount the Outer Header Brackets (42485) and Inner Head Brackets (42477) to the 3" x 4" frame beam on the bottom of the corn head. Place the U-Bolts over the top of the frame beam.
- Position the Header Brackets, between the row units.
  - It is suggested that a Header Bracket be placed inside the outer most row units on each side of the head
  - It is suggested that a Header Bracket be placed between row units, just outside of the feeder house of the combine.
  - Keep as much distance between brackets as possible.


Note: Locations may vary depending on the model.



120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

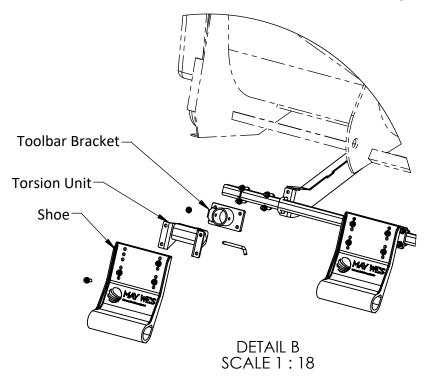

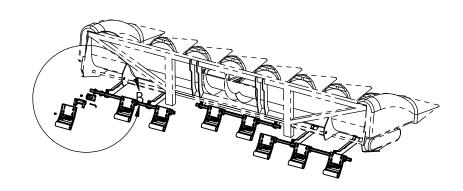

#### **Installation Procedure:**

- On flat ground, lower the head to approximate working height.
- Attach Toolbar Brackets (42298) using U-Bolts and nuts, behind the center of each row to be stomped.
- Lift Stalk Shoe Assembly into mating features on the mounting bracket and attach with pin and clip.
- Height can be adjusted by repositioning the shoe to the torsion unit. Each set of holes will adjust the height by 1"


#### NOTE:

Refer to G4 Stalk Stomper Instruction (Document 10274) for Setup, Operation, Maintenance, Transport and Storage Instructions





120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

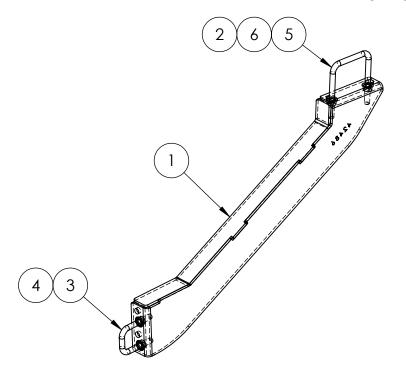

42485 - Outer Header Bracket

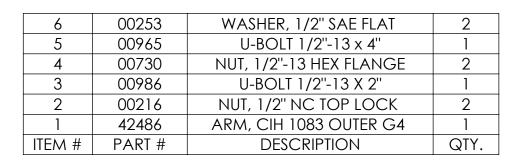

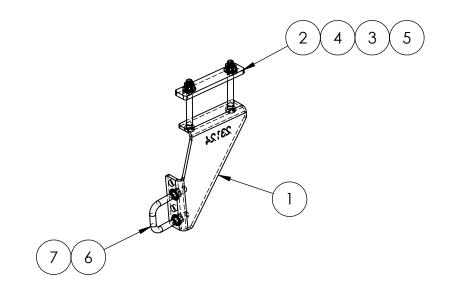

42477 - Center Header Bracket

7	00730	NUT, 1/2"-13 HEX FLANGE	2
6	00986	U-BOLT 1/2"-13 X 2"	1
5	00216	NUT, 1/2" NC TOP LOCK	2
4	00153	BOLT, 1/2 - 13UNC X 4-1/2"	2
3	00253	WASHER, 1/2" SAE FLAT	2
2	23020	STRAP, JD 40/90 MNTG	1
1	23124	BRACKET, CIH 900/1000 G4	1
ITEM #	PART#	DESCRIPTION	QTY.



120 Eastgate Drive SE Hutchinson, MN 55350


1-800-788-6483

1-320-587-2322

1-320-587-6112 (Fax)

**WWW.MAYWES.COM** 

PAGE 6 OF 7 Doc #: 10327\_A

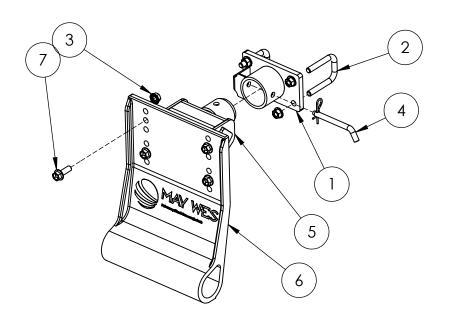

#### 43102 - Stalk Stomper Shoe Assembly

7	00729	BOLT, 1/2"-13 X 1-1/2" HEX FLANGE	4
6	24100	SHOE, G4 MOLDED	1
5	42295	STALK STOMPER TORSION ASSY	1
4	01130	PIN, 1/2" X 4" BENT HITCH	1
3	00730	NUT, 1/2"-13 HEX FLANGE	8
2	00986	U-BOLT 1/2"-13 X 2"	2
1	42298	WLDMT; TOOLBAR MNT BRKT	1
ITEM #	PART #	DESCRIPTION	QTY.



120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)