


LOW SERIAL # WEAR PLATE

INSTALLATION INSTRUCTIONS

(LEFT PLATE SHOWN)

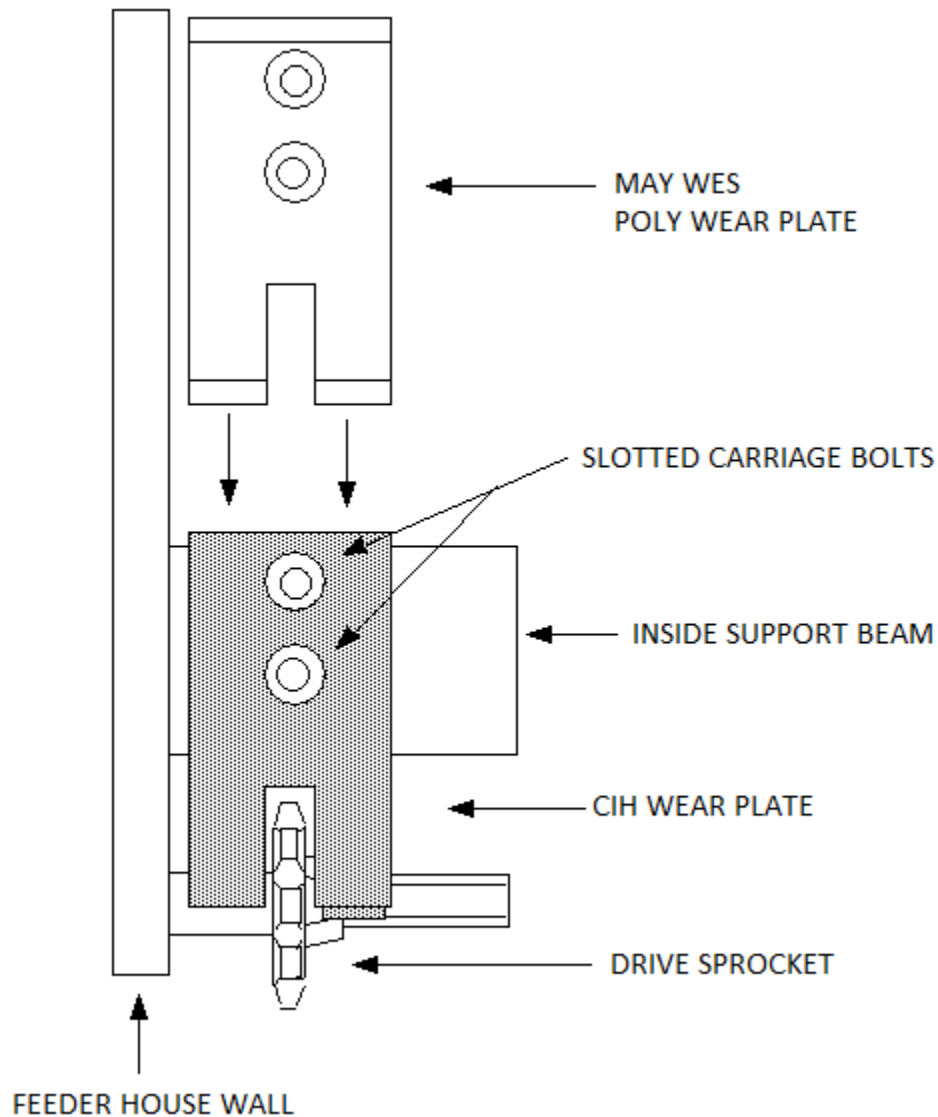

To install May Wes Poly Wear Plates:

1. Remove carriage bolts from Case-IH metal wear plate.
2. **Replace** metal wear plate with poly wear plate.
3. Bolt poly wear plate down with original Case-IH carriage bolts.

DO NOT leave the CIH metal plate under the poly wear plate.

The chain will not fit and the bolts will be too short!



MAY WES
Original Poly People
A DIVISION OF PRIDE SOLUTIONS

120 Eastgate Drive SE
PO Box 7
Hutchinson, MN 55350

1-800-788-6483
1-320-587-2322
1-320-587-6112 (Fax)

WWW.MAYWES.COM