




The Original Farmer Designed
59711 U.S. Hwy 12, Litchfield, MN 55355
1-888-485-8411

Assembly Instructions AGCO Hugger 30's Ends (Right) (H 7723)


Picture #1

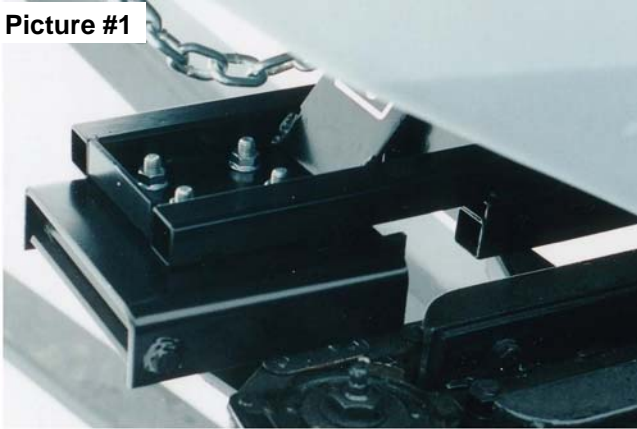


Picture #2



Picture #3

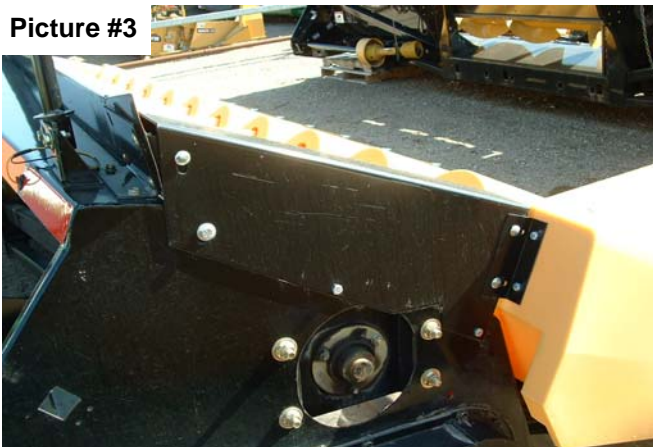

1. Bolt the front hinge bracket (**Item #4**) to the front of the **GVL** main frame (**Item #3**) using (4) 3/8" x 1" carriage bolts. The bracket should be offset toward the middle of the head (Leave loose). Mount the Gatherer Shield on the head. (**Picture #1**)
2. Mount the back mounting angle (**Item #9**) bracket on the back of the head using (2) 5/16" x 3/4" hex bolts and nuts (**Leave loose**). (**Picture #2**)
3. Install (2) 5/16" x 3/4" carriage bolts in the square holes at the front of the right end back mounting plate (**threads to outside**). Use the 5/16" bolt retainer to hold the bolts in place.
4. Install the right end back mounting plate to the head using 5/16" and 3/8" bolts, washers and nuts (**Drill 5/16" holes in the head**). (**Picture #3**).
5. Position the **GVL** Gatherer Shield and tighten the 3/8" carriage bolts on the front hinge bracket. (**Picture #1**)
6. Mount the back mount angle (**Item #10**) on the mounting plate (**slotted holes toward the mounting plate**). Slide tight to the plastic and drill 5/16" holes in the plastic. Fasten with 5/16" bolts, washers and nuts. (**Picture #3**)
7. The PVC pipe around the adjustment chain must be removed (for shipping only).

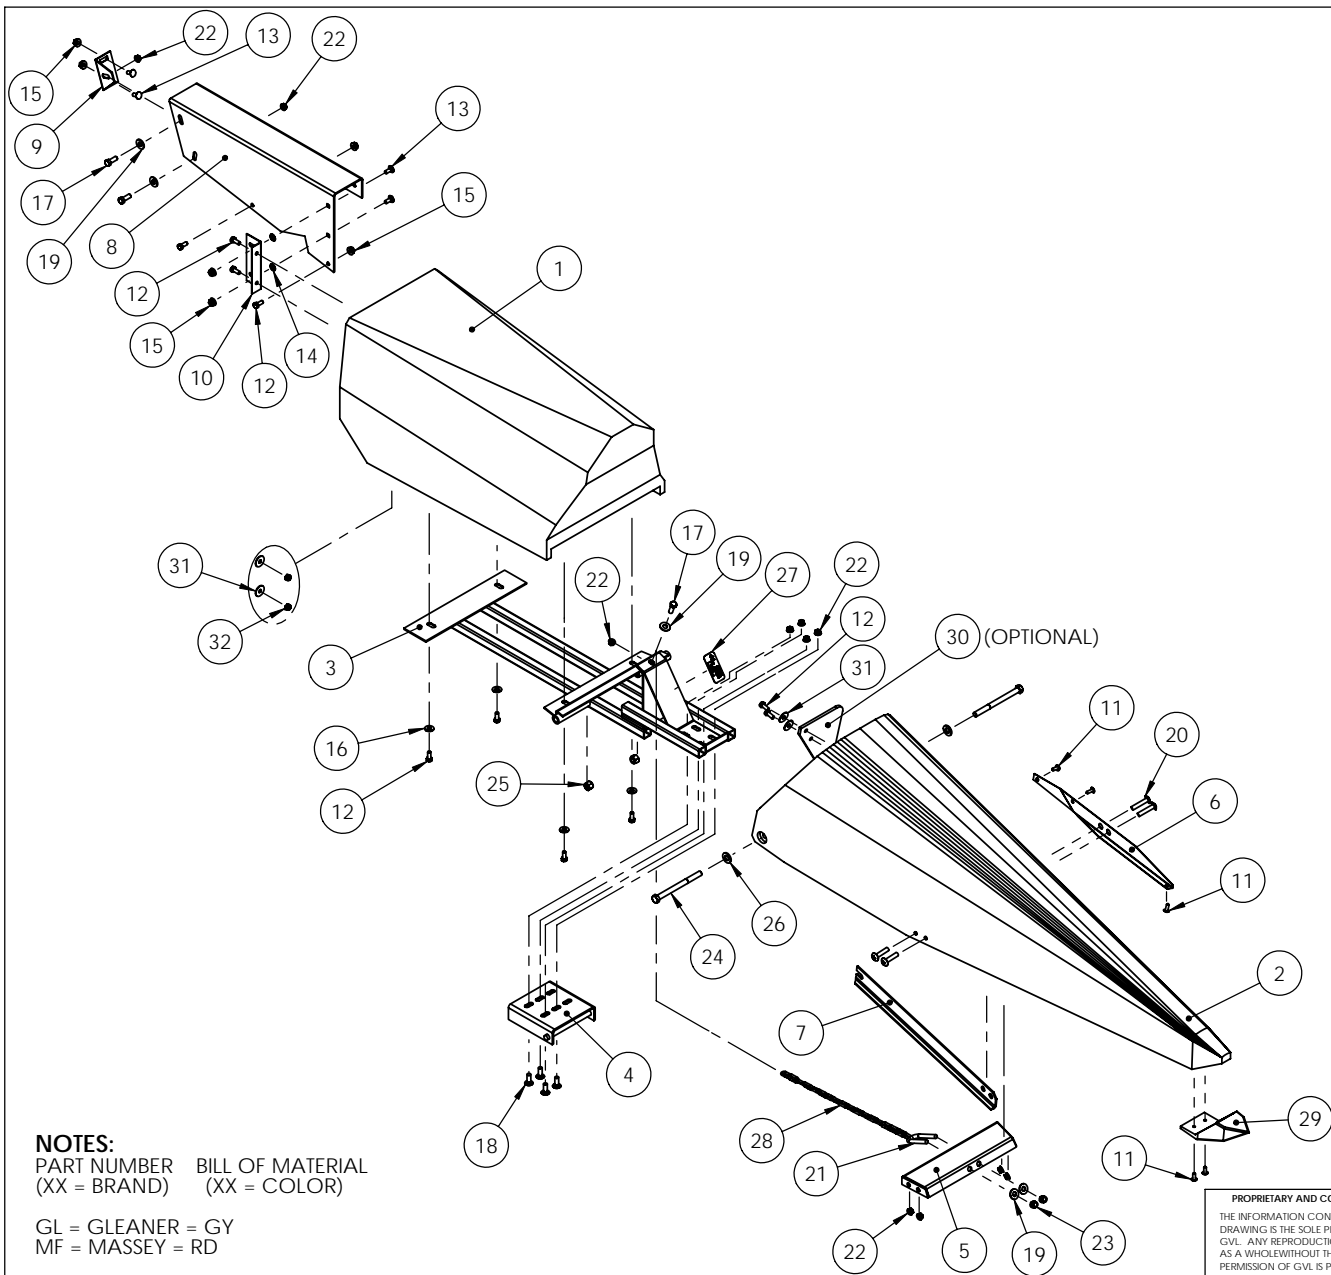

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	XX 07701	30's END RIGHT BACK SHORT	1
2	XX 17700	30's RIGHT END	1
3	DA 16702	END MAIN FRAME-30	1
4	DA 06712	FRONT HINGING BRKT	1
5	UN 17703	FRT ADJ GATH BRKT-30 RIGHT END	1
6	UN 21003	SS W STRIP-LEFT EDGE 30'S END	1
7	UN 00005	STIFFENER-RIGHT FRONT	1
8	DA 04405	RIGHT REAR MOUNTING PLATE	1
9	DA 01404	BACK MNTG ANGLE-SHORT	1
10	DA 01406	BACK MNTG ANGLE-LONG	1
11	14-34 TTS	1/4"x3/4" TR TAPPING SCREW	5
12	516-34 HB	5/16"x3/4" HX HD BOLT	10
13	516-34 CB	5/16"x3/4" CARRAGE BOLT	4
14	516-BR	5/16" BOLT RETAINER	2
15	516-FSN	5/16" FLANGE SERRATED NUT	6
16	516-W USS	5/16" USS FLAT WASHER	4
17	38-1 HB	3/8"x1" HX HD BOLT	3
18	38-1 CB	3/8"x1" CARR BOLT-SHORT NECK	4
19	38-W USS	3/8" USS FLAT WASHER	5
20	38-134 THB	3/8"x1 3/4" TRUSS HEAD BOLT	4
21	38-3 UB	3/8"x3" U-BOLT	1
22	38-FSN	3/8" FLANGE SERRATED NUT	11
23	38-NLN	3/8" NYLON LOCK NUT	2
24	12-150 MHB	12X150 HX HD METRIC BOLT	2
25	12-MLN	12 METRIC LOCK NUT	2
26	12-W SAE	1/2" SAE WASHER	2
27	SN-531	SERIAL NUMBER TAG	1
28	PCC-316	3/16 PROOF COIL CHAIN	21
29	WP-96	Wear Point	1
30	ES-GVL	GVL EAR SAVER	1
31	516-W F	5/16 FENDER WASHER	4
32	516-NLN	5/16" NYLON LOCK NUT	2

NOTES:
 PART NUMBER BILL OF MATERIAL
 (XX = BRAND) (XX = COLOR)
 GL = GLEANER = GY
 MF = MASSEY = RD

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS
 DRAWING IS THE SOLE PROPERTY OF
 GVL. ANY REPRODUCTION IN PART OR
 AS A WHOLE WITHOUT THE WRITTEN
 PERMISSION OF GVL IS PROHIBITED.

NAME	DATE	GVL	
DRAWN ALS	5/23/08	TITLE: AGCO 30's RIGHT END - HUGGER GVL I	
CHECKED			
ENG APPR.			
MFG APPR.			
Q.A.			
COMMENTS:		SIZE DWG. NO. REV B XX H 7723	
SCALE: 1:12		WEIGHT:	SHEET 1 OF 1