


# EAR SAVER

## INSTALLATION INSTRUCTIONS

To mount May Wes Ear Savers, simply replace the combine's existing ear savers and attach the May Wes ones using the existing bolts. If the bolts are worn or the threads are damaged, replace them.

If the Ear Savers are not predrilled, position them where they will give the best performance, mark and drill the holes through the Ear Saver and mount using the existing hardware.

If your combine does not have factory-original ear savers, mount the May Wes Ear Savers on the combine dividers as shown in the diagram below. Fasten them with two bolts to prevent them from turning or tearing.

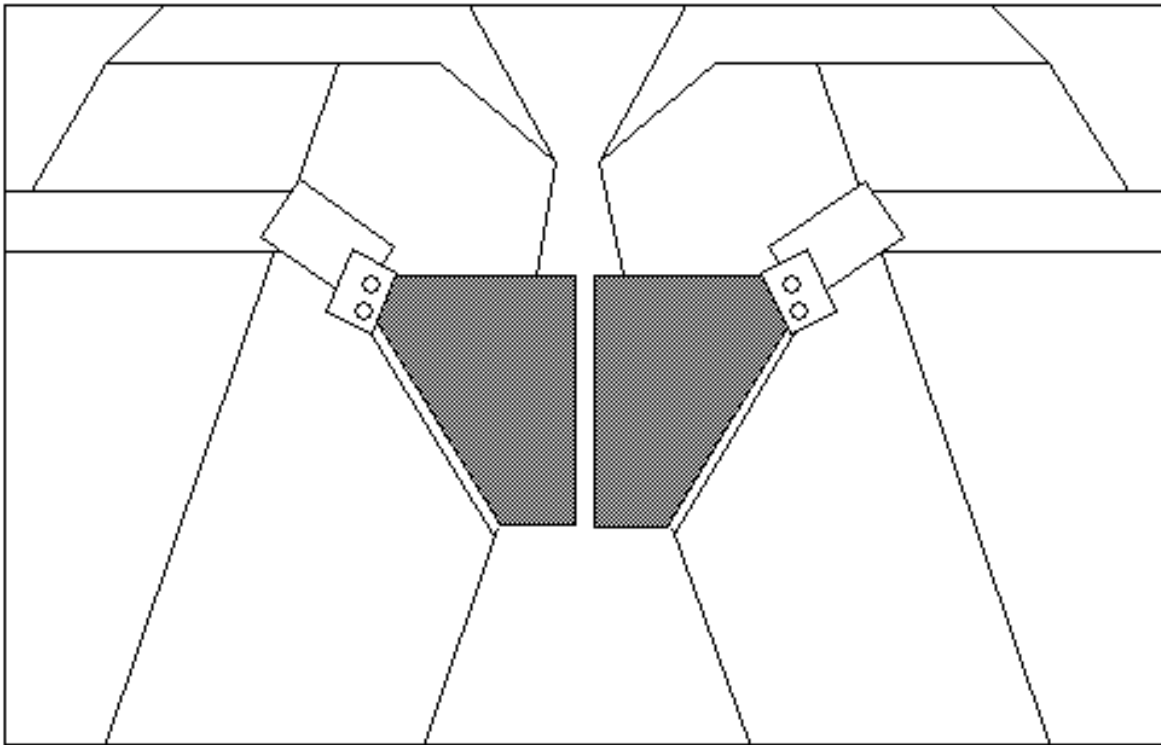

**MAY WES**  
*Original Poly People*  
A DIVISION OF PRIDE SOLUTIONS

120 Eastgate Drive SE  
PO Box 7  
Hutchinson, MN 55350

1-800-788-6483  
1-320-587-2322  
1-320-587-6112 (Fax)

[WWW.MAYWES.COM](http://WWW.MAYWES.COM)