
Challenger/Gleaner/Massey Poly Retractable Finger Instruction Sheet

- 1. Remove bolt or retaining pin securing finger to bearing inside auger, remove finger.
- 2. Inspect the bearing for wear or damage. Repair or replace if needed. Attach finger to adapter and secure with clip.
- 3. Remove existing finger guide, remove any burrs from the opening in the auger skin.
- 4. Install finger guide on either the inside or outside of the auger skin. Secure using supplied hardware.
- 5. Align poly finger with mounting hole. Install bolt or retaining pin to secure finger.

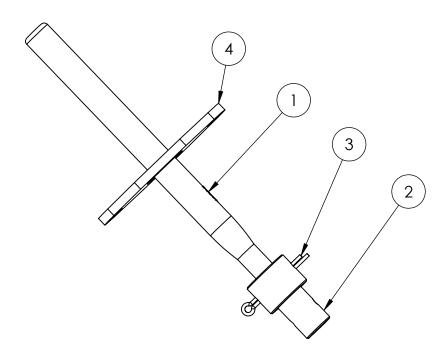

Adaptor Kit (includes adapter & clip) #41998 Complete Finger Kit #83439

ITEM#	PART#	DESCRIPTION	QTY
1	42235	POLY FINGER	1
2	21776	ADAPTER POLY FINGER	1
3	00957	PIN, 3/16" X 2" COTTER	1
4	22174	AGCO FINGER GUIDE	1

Important Note
When finger is fully retracted, it should extend 1/2" above poly guide surface. Also check clearance between extended finger and auger floor before operating.



120 Eastgate Drive SE PO Box 7 Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

WWW.MAYWES.COM

PAGE 1 OF 1 Doc #: 10163_B