


# CASE IH 2600/4400 SERIES - NEW HOLLAND 99C/980 SERIES

ROWS 2 & 5 ON 2600 AND 99C SIX ROW HEADS

ROWS 2 & 11 ON 4400 AND 980 TWELVE ROW FOLDING HEADS

STALK STOMPER PARTS LISTING/ASSEMBLY INSTRUCTIONS

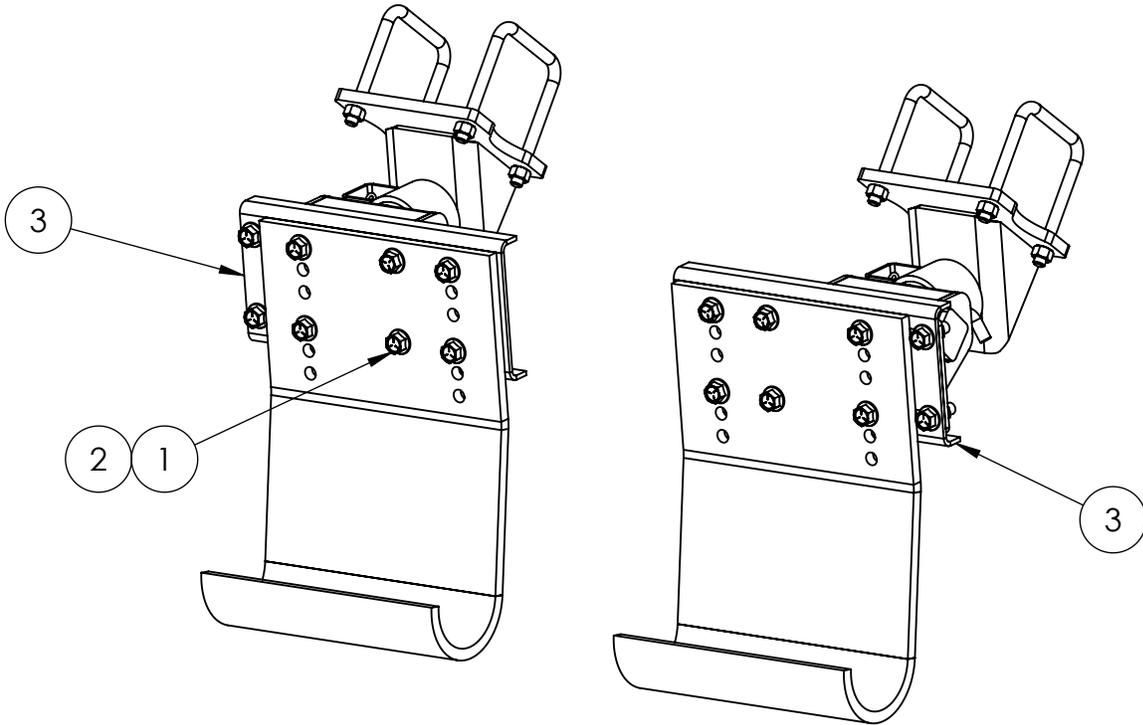

3	22812	PLT, OFFSET, STOMPER MOUNT	2
2	00730	NUT, 1/2"-13 HEX FLANGE	4
1	00729	BOLT, 1/2"-13 X 1-1/2" HEX FLANGE	4
ITEM #	PART #	DESCRIPTION	QTY



**MAY WES**  
*Original Poly People*  
 A DIVISION OF PRIDE SOLUTIONS

120 Eastgate Drive SE  
 PO Box 7  
 Hutchinson, MN 55350

1-800-788-6483  
 1-320-587-2322  
 1-320-587-6112 (Fax)

[WWW.MAYWES.COM](http://WWW.MAYWES.COM)

# CASE IH 2600/4400 SERIES - NEW HOLLAND 99C/980 SERIES

ROWS 2 & 5 ON 2600 AND 99C SIX ROW HEADS

ROWS 2 & 11 ON 4400 AND 980 TWELVE ROW FOLDING HEADS


## STALK STOMPER PARTS LISTING/ASSEMBLY INSTRUCTIONS

### Safety Procedure:

- Park combine on level ground and lock the brakes.
- Raise the head and lock in the upright position.

### Installation Procedure:

- Remove the factory metal shield above the 4X4 frame beam on rows that stalk stompers are being installed.
- Place U-Bolts over the top of the 4X4 frame beam.
- Place the Header Bracket (42354) below the 4X4 frame beam and to the inside of the sub frame as close to row center as possible positioning the "hook slots" toward the rear of the head. Align the U-Bolts with Header Bracket and secure in place with the 1/2" top lock nuts, clamping the frame beam.
- Insert the Stalk Stomper Assy (43102) into mating features in the Header Bracket (42354)  
Insert lock pin to secure in place.
- Replace the factory metal shield.

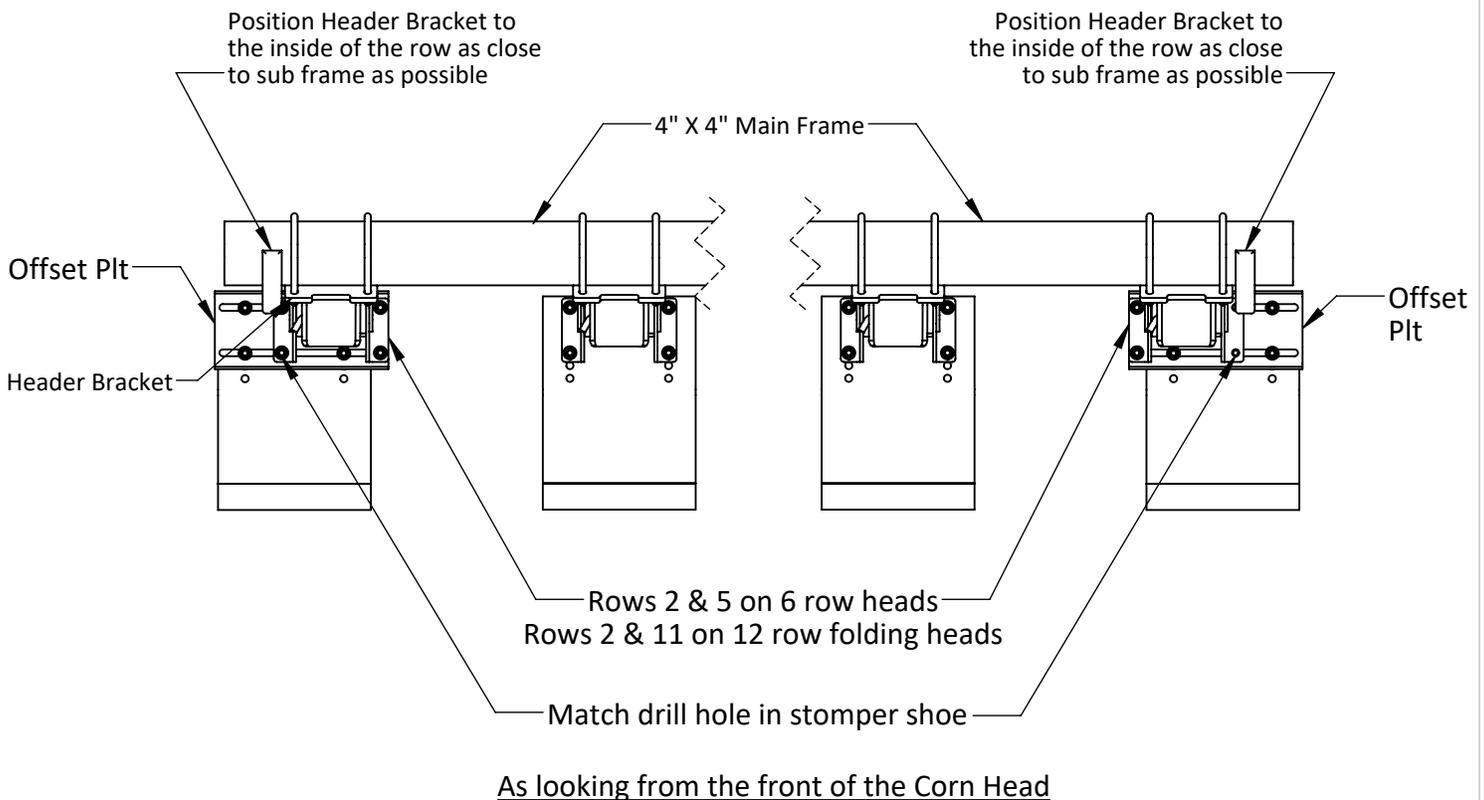

120 Eastgate Drive SE  
PO Box 7  
Hutchinson, MN 55350

1-800-788-6483  
1-320-587-2322  
1-320-587-6112 (Fax)

[WWW.MAYWES.COM](http://WWW.MAYWES.COM)