


CAUTION

PLEASE REFER TO YOUR EQUIPMENT MANUFACTURER'S OPERATORS MANUAL FOR PERTINENT SAFETY PRECAUTIONS

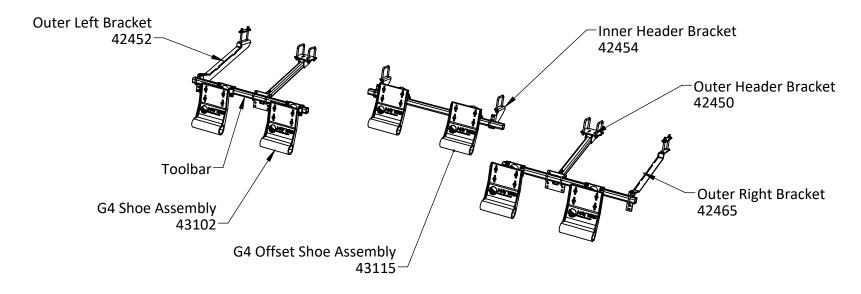

Notes:

- Illustration shown is for reference purposes only. Quantities and components will vary. Please refer to individual component parts listings for specific information.
- * Toolbar is not included in all kits. If a kit without Toolbar was ordered, the customer is responsible for providing required Toolbar.




120 Eastgate Drive SE Hutchinson, MN 55350


1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)


WWW.MAYWES.COM

PAGE 1 OF 7 Doc #: 10309_A






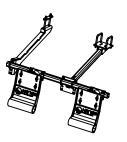


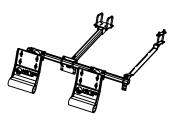

2 Row Layout



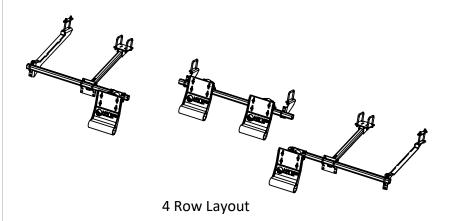

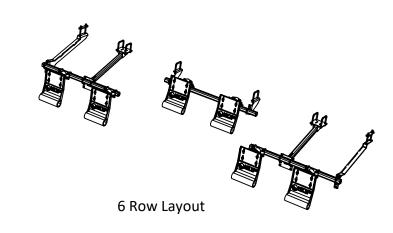



120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

WWW.MAYWES.COM

CASE IH 2200/2400/3200/3400 SERIES - NEW HOLLAND 96C/98C/980D/996 6 Row Heads

G4 TOOLBAR MOUNT STALK STOMPER Left End Bracket Assy (42452)Direction of Travel Toolbar Center Toolbar Header Bracket Assv Center Header Bracket (42450)(42454)**Header Bracket Assy** (42450)**Installation Procedure:** Right End Bracket Assy

- Park combine on level ground and lock the brakes.
- Raise the head and lock in the upright position.
- Mount the Header Brackets to the 4" x 4" frame beam on the bottom of the corn head. Place the U-Bolts over the top of the 4 x 4 frame beam.
- Place the Header Bracket Assembly (42450) below the 4 x 4 frame tube and between the row units.
- Mount a Header Bracket on each side of the head, positioning the brackets between rows, and mount an end bracket outward, close to the endplate
- Mount Center Header Brackets (42454) to the 4" x 4" frame beam on the bottom of the corn head. Place the U-Bolts over the top of the 4 x 4 frame beam.
- Mount toolbar (2" x 2" square tube) to the mounting brackets using the 2" U-Bolts and lock nuts provided. **Note**: Toolbars may need to be trimmed to fit.




120 Eastgate Drive SE Hutchinson, MN 55350 1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

(42465)

WWW.MAYWES.COM

Doc #: 10309 A PAGE 3 OF 7

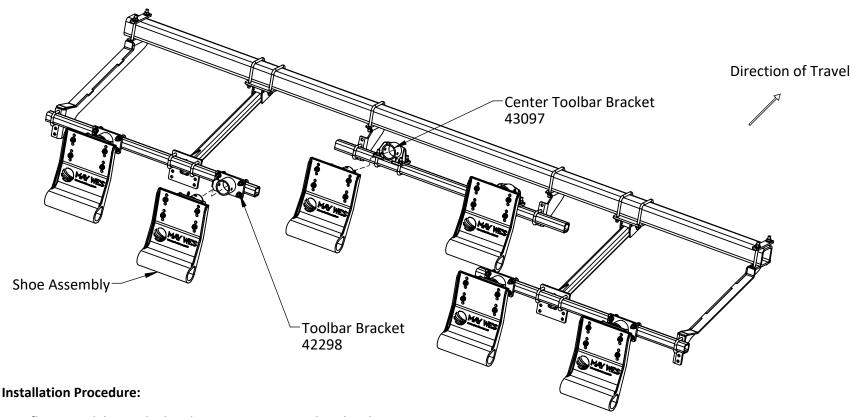

- On flat ground, lower the head to approximate working height.
- Attach Toolbar Brackets using U-Bolts and nuts, behind the center of each row to be stomped.
- Lift Stalk Stomper Assembly into mating features on the mounting bracket and attach with pin and clip.
- Height can be adjusted by repositioning the shoe to the torsion unit. Each hole set will adjust the height by 1"

NOTE:

Refer to G4 Stalk Stomper Instruction (Document 10274) for Setup, Operation, Maintenance, Transport and Storage Instructions





120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

WWW.MAYWES.COM

PAGE 4 OF 7 Doc #: 10309_A

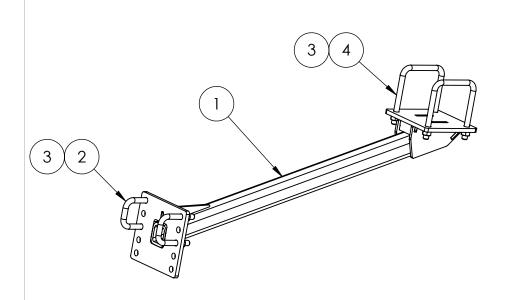

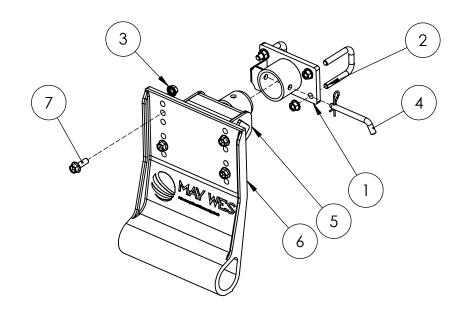

42450 - Header Bracket Assembly

4	00965	U-BOLT 1/2"-13 x 4"	2
3	00730	NUT, 1/2"-13 HEX FLANGE	8
2	00986	U-BOLT 1/2"-13 X 2"	2
1	42449	ARM, CIH 22/24/32/34 MOUNT	1
ITEM #	PART #	DESCRIPTION	QTY.

43102 - Stalk Stomper Shoe Assembly

7	00729	BOLT, 1/2"-13 X 1-1/2" HEX FLANGE	4
6	24100	SHOE, G4 MOLDED	1
5	42295	STALK STOMPER TORSION ASSY	1
4	01130	PIN, 1/2" X 4" BENT HITCH	1
3	00730	NUT, 1/2"-13 HEX FLANGE	8
2	00986	U-BOLT 1/2"-13 X 2"	2
1	42298	WLDMT; TOOLBAR MNT BRKT	1
ITEM #	PART #	DESCRIPTION	QTY.



120 Eastgate Drive SE Hutchinson, MN 55350


1-800-788-6483


1-320-587-2322

1-320-587-6112 (Fax)

WWW.MAYWES.COM

PAGE 5 OF 7 Doc #: 10309_A

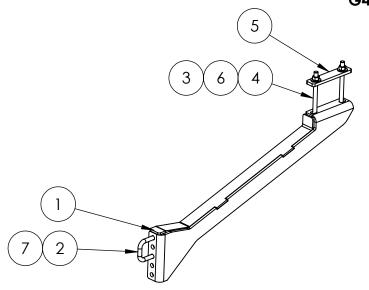

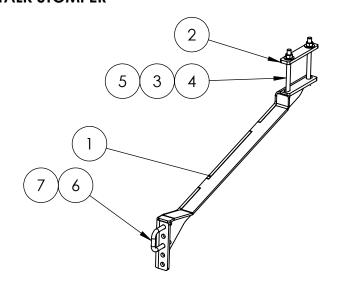

42452 -Left Header Bracket Assembly

7	00730	NUT, 1/2"-13 HEX FLANGE	2
6	00253	WASHER, 1/2" FLAT	4
5	22980	STRAP, CIH 22/24/32/34 MNT	1
4	00160	BOLT, 1/2" NC X 6"	2
3	00216	NUT, 1/2" TOP LOCK	2
2	00986	U-BOLT 1/2"-13 X 2"	1
1	42451	ARM, CIH 22/24/32/34 LEFT END	1
ITEM #	PART #	DESCRIPTION	QTY.

42465 - Right Header Bracket Assembly

00730	NUT, 1/2"-13 HEX FLANGE	2
00986	U-BOLT 1/2"-13 X 2"	1
00216	NUT, 1/2" TOP LOCK	2
00160	BOLT, 1/2" NC X 6"	2
00253	WASHER, 1/2" FLAT	4
22980	STRAP, CIH 22/24/32/34 MNT	1
42464	ARM, CIH 22/24/32/34 RIGHT	1
PART#	DESCRIPTION	QTY.
	00986 00216 00160 00253 22980 42464	00986 U-BOLT 1/2"-13 X 2" 00216 NUT, 1/2" TOP LOCK 00160 BOLT, 1/2" NC X 6" 00253 WASHER, 1/2" FLAT 22980 STRAP, CIH 22/24/32/34 MNT 42464 ARM, CIH 22/24/32/34 RIGHT





120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

WWW.MAYWES.COM

Doc #: 10309_A

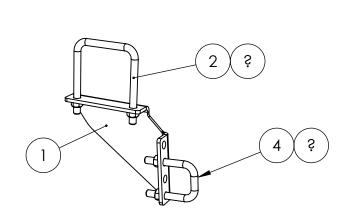

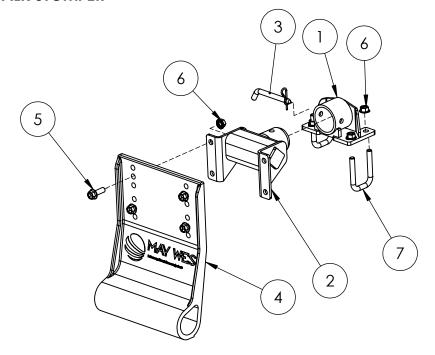

42454 - Center Header Bracket Assembly

5	00216	NUT, 1/2" NC TOP LOCK	2
4	00986	U-BOLT 1/2"-13 X 2"	1
3	00730	NUT, 1/2"-13 HEX FLANGE	2
2	00965	U-BOLT 1/2"-13 x 4"	1
1	22987	BRACKET, CIH 22/24/32/34 CTR	1
ITEM #	PART #	DESCRIPTION	QTY.

43115 - Stalk Stomper Shoe Assembly

7	00986	U-BOLT 1/2"-13 X 2"	2
6	00730	NUT, 1/2"-13 HEX FLANGE	8
5	00729	BOLT, 1/2"-13 X 1-1/2" HEX FLANGE	4
4	24100	SHOE, G4 MOLDED	1
3	01130	PIN, 1/2" X 4" BENT HITCH	1
2	42295	STALK STOMPER TORSION ASSY	1
1	43097	TOOLBAR MOUNT BRACKET	1
ITEM #	PART #	DESCRIPTION	QTY.



120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483

1-320-587-2322

1-320-587-6112 (Fax)

WWW.MAYWES.COM

Doc #: 10309 A