# MACDON C SERIES G4 TOOLBAR MOUNT STALK STOMPER




### **CAUTION**

PLEASE REFER TO YOUR EQUIPMENT MANUFACTURER'S OPERATORS MANUAL FOR PERTINENT SAFETY PRECAUTIONS

## **↑** IMPORTANT

Read all instructions before starting installation

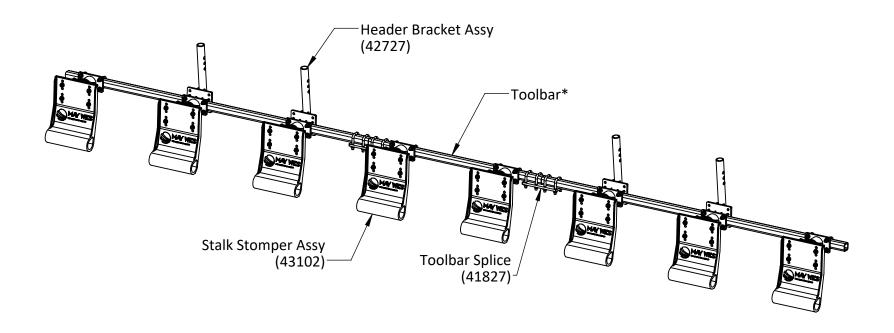

#### Notes:

- -Illustration shown is for reference purposes only. Quantities and components will vary.
- Please refer to individual component part listing for specific information.
- -Due to variation of implement configurations, row coverage under the feeder house may not be applicable.
- \*Toolbar is not included in all kits. If a kit without Toolbar was ordered, the customer is responsible for providing required Toolbar. Toolbar may be required to be cut to length.





120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)






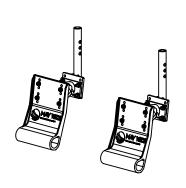

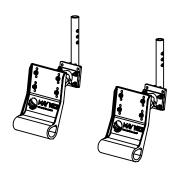

2-ROW


4-ROW

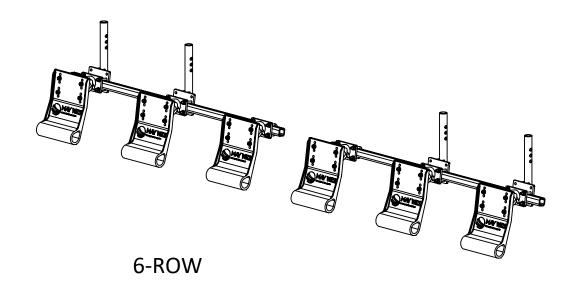




120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

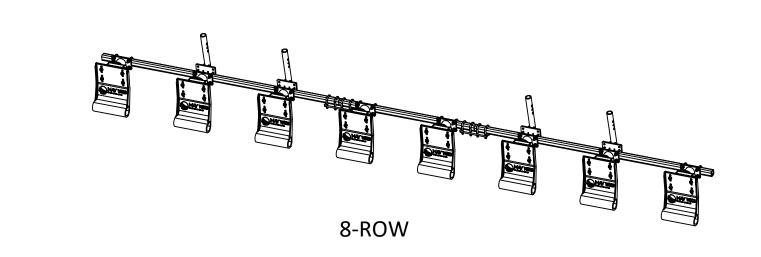

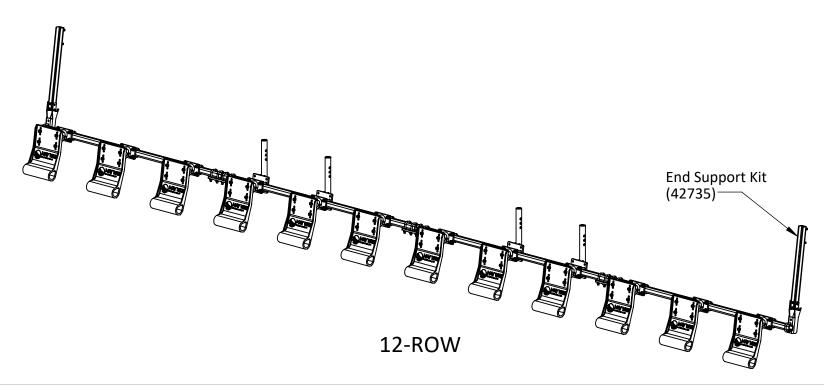




120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

# MACDON C SERIES HEADER BRACKET INSTALLATION

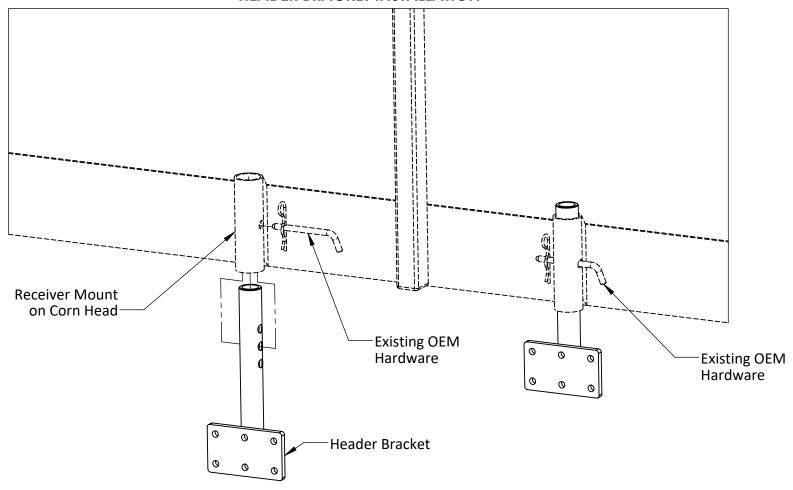

#### **Installation Procedure:**

- -Park combine on level ground and lock the brakes.
- -Raise the head and lock in the upright position.
- -Slide Header Bracket (42727) into the existing Receiver Mounts on the head and secure in place reusing existing hardware




120 Eastgate Drive SE Hutchinson, MN 55350


1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

## MACDON C SERIES STALK STOMPER OPTIONAL SETUPS

## Non-Toolbar Mount Installation for 2 & 4 Row Kits

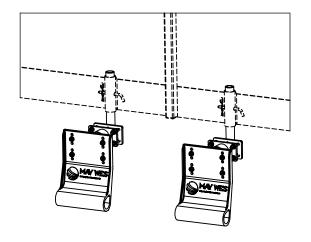

# **Toolbar Mount Installation** for 6, 8, & 12 Row Kits

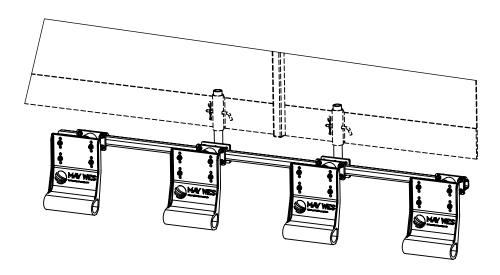

#### Non-Toolbar Installation Procedure:

- -Fasten Mount Bracket to Header Bracket using supplied hardware.
- -Install Stalk Stomper into mating features of Mount Bracket and secure with Lock Pin.

#### **Toolbar Installation Procedure:**

-Fasten Toolbar to Header Brackets using supplied bolts, Lock Washers and nuts.

Note: If kit was purchased with Toolbar included, Toolbar may need to be trimmed to fit.

- -Fasten Mount Brackets to Toolbar using supplied U-Bolts, Lock Washers and Nuts on center of the rows to be stomped.
- -Install Stalk Stomper into mating features of Mount Bracket and secure with Lock Pin.



**120 Eastgate Drive SE Hutchinson, MN 55350**  1-800-788-6483


1-320-587-2322

1-320-587-6112 (Fax)

WWW.MAYWES.COM

Doc #: 10324 A

# G4 TOOLBAR MOUNT STALK STOMPER ASSEMBLY/INSTALLATION INSTRUCTIONS

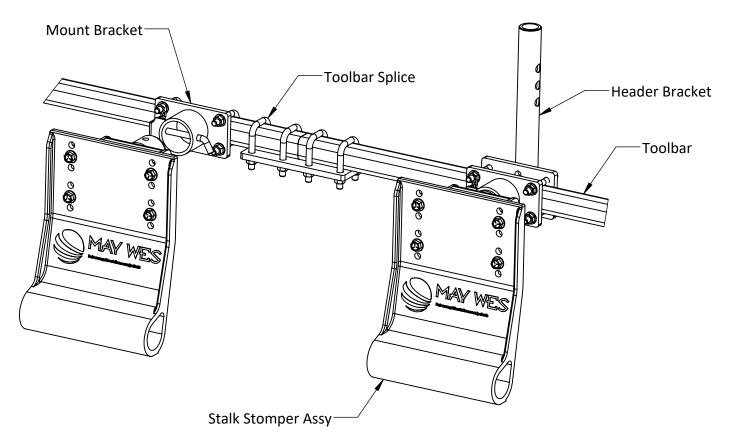

#### **Assembly/Installation Procedure:**

- Fasten Toolbar to Head Mount Brackets using supplied U-Bolts, Lock Washers and Nuts. **Note:** If kit was purchased with Toolbar included, Toolbar may need to be trimmed to fit.
- Fasten Mount Brackets to Toolbar using supplied U-Bolts, Lock Washers and Nuts on center of the rows to be stomped.
- -Install Stalk Stomper into mating features of Mount Bracket and secure with Lock Pin.
- When applicable
  Fasten Toolbars together using the Toolbar Splice (not included in all kits).




120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483 1-320-587-2322

**WWW.MAYWES.COM** 

1-320-587-6112 (Fax)

# MACDON C SERIES TOOLBAR MOUNT STALK STOMPER ASSEMBLY INSTRUCTIONS/PARTS LISTING

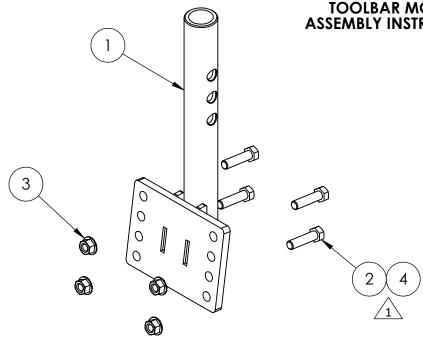

42727 HEADER BRACKET ASSEMBLY


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	42727	HEAD MOUNT BRACKET	1
2	00146	BOLT, 1/2"-13 X 2 HEX	4
3	00730	NUT, 1/2"-13 HEX FLANGE	4
4	00154	BOLT, 1/2"-13 X 4" HEX	4

#### NOTE:

1

Use 2" Bolt for Non-Toolbar application and 4" Bolt for Toolbar application.

A DIVISION OF PRIDE SOLUTIONS

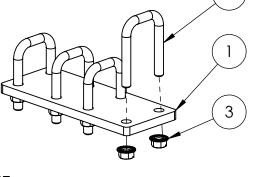

**41827** TOOLBAR SPLICE

ITEM#	PART #	DESCRIPTION	QTY
1	22341	SPLICE PLATE	1
2	00986	U-BOLT 1/2"-13 X 2"	4
3	00730	NUT, 1/2"-13 HEX FLANGE	8

Items 9 and 10 listed below (but not shown) are not included in all kits, please order individually if needed.

ITEM#	PART #	DESCRIPTION	QTY
9	41672	72" TOOLBAR (2" X 2")	VARIES
10	41673	102" TOOLBAR (2" X 2")	VARIES

120 Eastgate Drive SE Hutchinson, MN 55350

1-800-788-6483

1-320-587-2322

1-320-587-6112 (Fax)