JOHN DEERE 9R SERIES


TRACTOR STALK STOMPER INSTALLATION

Safety Recommendations:

Prior to installation, removal or maintenance of May Wes Stalk Stompers, park tractor on level ground and lock the brakes. In addition, please follow all safety recommendations listed in the OEM owner's manual.

Installation:

- 1) Hold mount bracket #41995 up to the front right side of tractor frame matching the hole pattern in the bracket to existing hole locations in the tractor frame. Attach mount bracket to tractor using supplied 7/8" hardware.
- 2) Hold mount bracket #41996 up to the left right side of tractor frame matching the hole pattern in the bracket to existing hole locations in the tractor frame. Attach mount bracket to tractor using supplied 7/8" hardware.
- 3) Proceed to mounting the Lift Arm Assemblies using 3/4" hardware supplied with mount kit and instructions provided with each Lift Arm Kit.
- 4) Reference page 2 for Stalk Stomper positioning and mounting using the 1/2" hardware supplied with mount kit.
- * All orientation references are from the operators position.

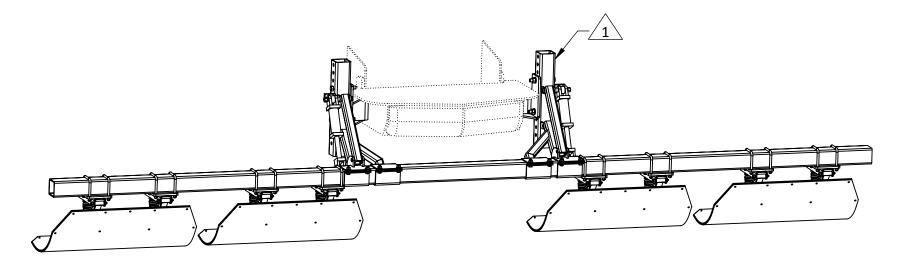

NOTES:




Graphics are for reference only and do not represent final assembled height.



120 Eastgate Drive SE PO Box 7 Hutchinson, MN 55350 1-800-788-6483 1-320-587-2322 1-320-587-6112 (Fax)

WWW.MAYWES.COM

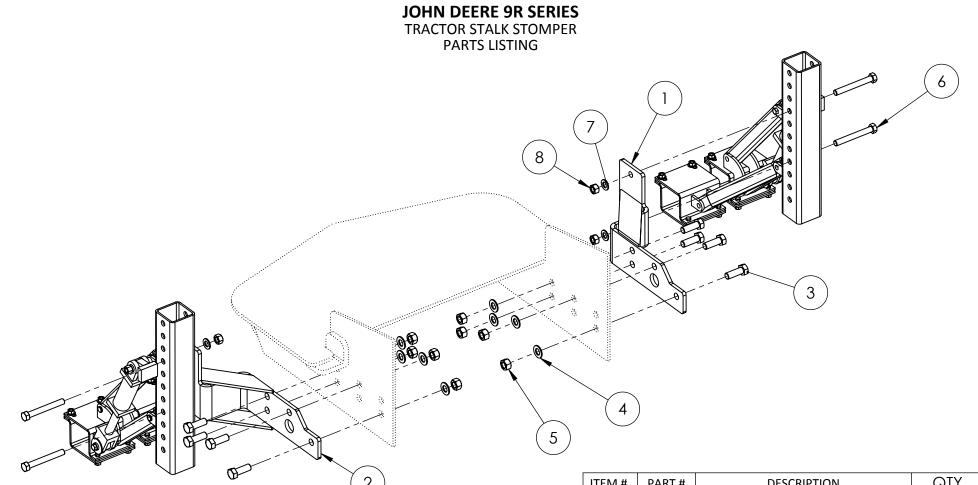

	ITEM#	PART #	DESCRIPTION	QTY
	1	41995	MOUNT BRACKET (RIGHT)	1
	2	41996	MOUNT BRACKET (LEFT)	1
	3	00983	BOLT, 7/8"-9 X 2-1/2" HEX	8
	4	00238	WASHER, 7/8" FLAT SAE	8
	5	00984	NUT, 7/8"-9 TOP LOCK	8
	6	00033	BOLT, 3/4"-10 X 6" HEX	4
	7	00238	WASHER, 3/4" FLAT SAE	4
	8	00621	NUT, 3/4"-10 TOP LOCK	4



120 Eastgate Drive SE PO Box 7 **Hutchinson, MN 55350** 1-800-788-6483

1-320-587-2322 1-320-587-6112 (Fax)

WWW.MAYWES.COM

Doc #: 10176_B PAGE 2 OF 2