


POLY MOLDBOARD LINER MOUNTING INSTRUCTIONS

1. Remove steel shin and lay from moldboard.
2. Remove bolts from steel moldboard that match holes in poly moldboard.
3. Clamp poly moldboard to steel moldboard and bolt together with supplied 2" bolt. (see below)
4. Place poly shin underneath routed edge of the poly moldboard.
5. Bolt steel shin over poly shin with original bolts.
6. Place poly spacer over routed edges of poly shin and moldboard.
7. Bolt steel lay over poly spacer using original bolts.
8. Finish bolting poly moldboard to steel moldboard with supplied 1-1/2" bolts.

NOTE: CHECK AND RETIGHTEN BOLTS AFTER FIRST TEN ACRES.

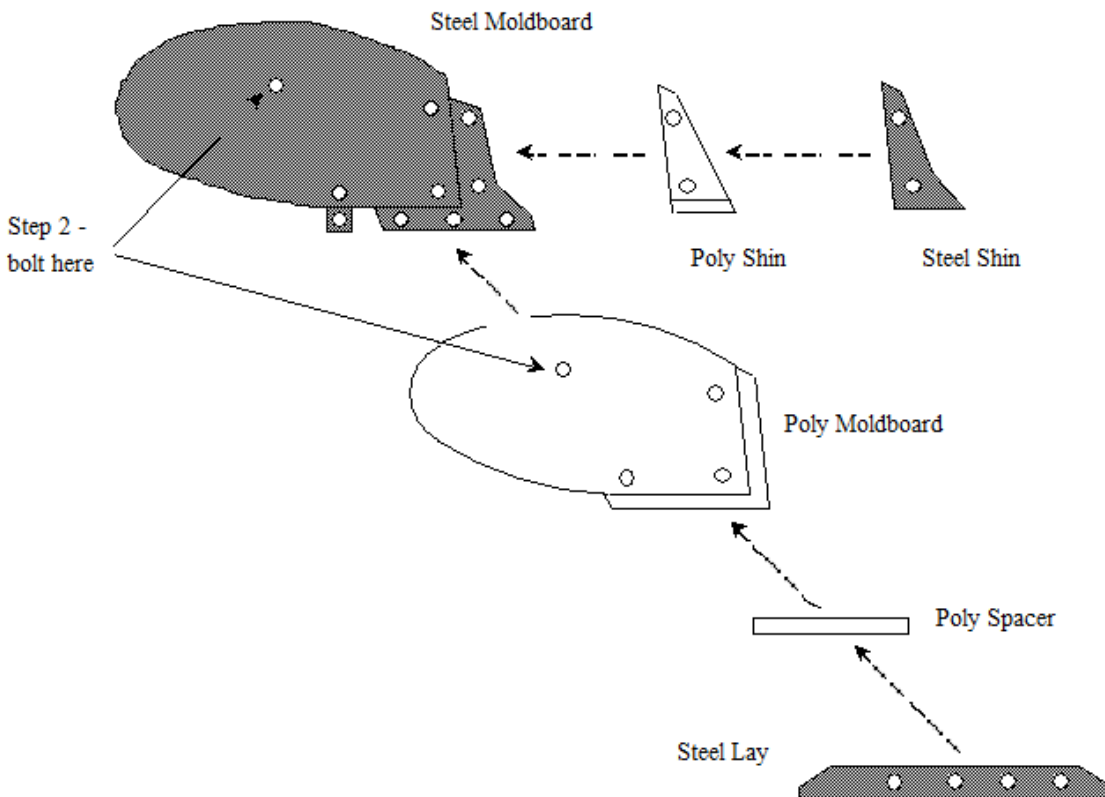

MAY WES
Original Poly People
A DIVISION OF PRIDE SOLUTIONS

120 Eastgate Drive SE
PO Box 7
Hutchinson, MN 55350


1-800-788-6483
1-320-587-2322
1-320-587-6112 (Fax)

WWW.MAYWES.COM

POLY MOLDBOARD LINER MOUNTING INSTRUCTIONS

BUFFALO RIDGE TILL MOLDBOARDS


1. Drill holes in plastic as shown by pattern.
2. Mark holes on steel. Remove plastic before drilling holes in steel.
3. Do not drill holes in plastic and steel at the same time.
4. Replace plastic and insert rivets.

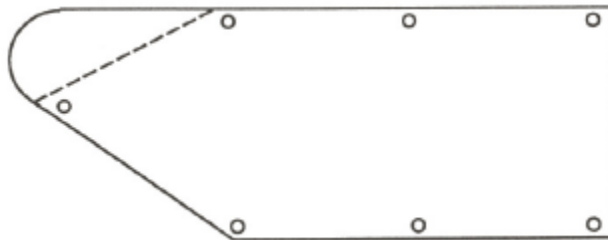

NOTE: Be sure to measure the Buffalo Ridge moldboard length.
The older model is 20" long. Then new model is 19" long.

HINIKER TILL MOLDBOARDS

1. Place 7/16" carriage bolts in holes.
2. Pop rivet in corners.

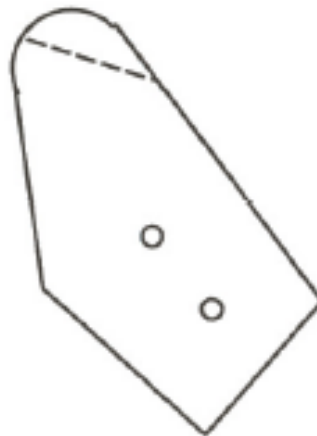

MAY WES
Original Poly People
A DIVISION OF PRIDE SOLUTIONS

120 Eastgate Drive SE
PO Box 7
Hutchinson, MN 55350

1-800-788-6483
1-320-587-2322
1-320-587-6112 (Fax)

WWW.MAYWES.COM