

UNDRILLED POLY SKID SHOES

Mounting Instructions


1. Match up poly skid shoe with metal shoe. Cut or notch poly skid if needed for a better fit. The poly can be cut with woodworking tools. Cut away as little as possible.
2. Using supplied bit, mark and drill holes in poly skid along lead and trailing edges every 6" at ½" from the edge.
3. Place poly skid on metal skid. Mark holes on metal thru poly skid.
4. Remove poly skid and drill holes in metal with supplied bit.

DO NOT DRILL HOLES THRU POLY INTO METAL.
YOU WILL OVERSIZE HOLE IN THE POLY AND
FASTENERS WILL NOT HOLD!


5. Attach lead edge of skid first. Hold poly and metal skids together tightly (clamp if possible) and fasten them using pop rivets or pound rivets:

POP RIVETS: insert the rivet into the hole as far as possible before pulling it tight with rivet gun (see below)

This Rivet is thru far enough....

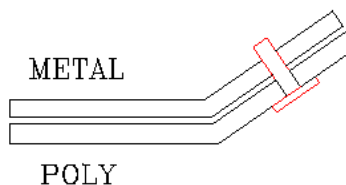

This rivet is NOT thru far enough....

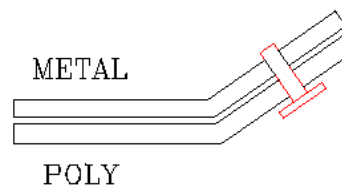


POUND RIVETS: insert the rivet into the holes and pound the pin on the top of the rivet with a hammer until it is flush with the rounded top of the rivet head.

6. Attach rear edge of the skid following instructions for lead edge.
7. Repeat steps 1 – 6 for the rest of the skids.

DO YOU HAVE REPLACEMENT SKIDS?

Hold your poly skid to the metal and shine a light behind the metal skid. The holes in the metal will let the light thru to show up on the poly. Just mark them and drill away!

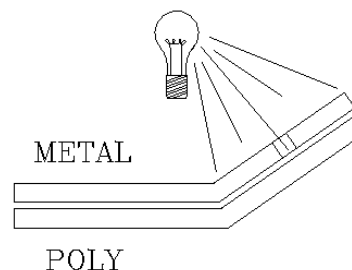

MAY WES
Original Poly People
A DIVISION OF PRIDE SOLUTIONS

120 Eastgate Drive SE
PO Box 7
Hutchinson, MN 55350

1-800-788-6483
1-320-587-2322
1-320-587-6112 (Fax)

WWW.MAYWES.COM