


Challenger/Gleaner/Massey Poly Retractable Finger Instruction Sheet

1. Remove bolt or retaining pin securing finger to bearing inside auger, remove finger.
2. Inspect the bearing for wear or damage. Repair or replace if needed.
Attach finger to adapter and secure with clip.
3. Remove existing finger guide, remove any burrs from the opening in the auger skin.
4. Install finger guide on either the inside or outside of the auger skin. Secure using supplied hardware.
5. Align poly finger with mounting hole. Install bolt or retaining pin to secure finger.
Apply Loctite to adapter threads prior to assembly.

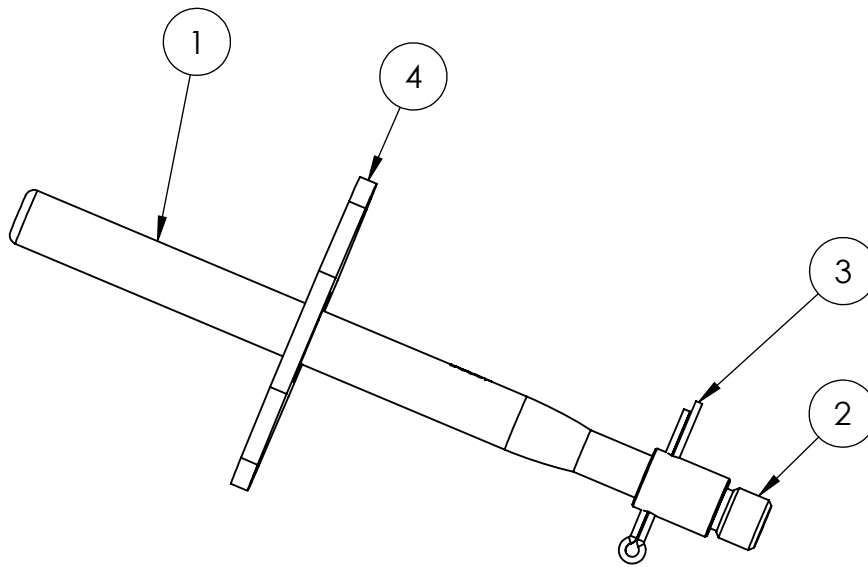

Adaptor Kit (includes adapter & clip) #41602
Complete Finger Kit #82620

ITEM#	PART#	DESCRIPTION	QTY
1	42235	POLY FINGER	1
2	22132	FINGER ADAPTER	1
3	00957	PIN, 3/16" X 2" COTTER	1
4	22174	AGCO FINGER GUIDE	1

****Important Note****

When finger is fully retracted, it should extend 1/2" above poly guide surface. Also check clearance between extended finger and auger floor before operating.



120 Eastgate Drive SE
PO Box 7
Hutchinson, MN 55350

1-800-788-6483
1-320-587-2322
1-320-587-6112 (Fax)

WWW.MAYWES.COM